

 
PERMANENT ANCHORS OF A TEMPORARY CAR SHELTER

Please read the instructions carefully and verify the pieces before starting the installation.

1. Placement of anchors:

Start by identifying the correct positions for your anchors according to the illustration provided with your shelter.

The anchor positionning should be in relation to the structure of the shelter and its size.

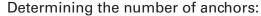



The number of required anchors depends on the length of the car shelter.

For shelters up to 24 feet in length; use 4 anchors.

For shelters that are 28 feet and longer; use 6 anchors.

Note: Certain conditions may warrant additionnal anchoring.

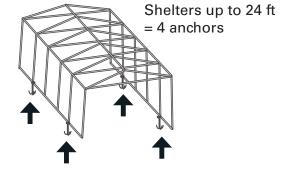

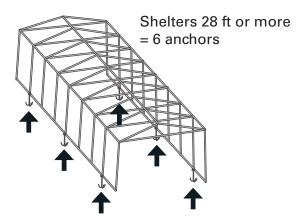


2. Drilling anchor holes:

Use a suitable drill to create holes in the ground for the anchors.

Each hole should be \(\frac{7}{8} \)" in diameter and 20" inches deep.

Make the holes as close as possible to the structure. Temporarily move the structure once you have found the drilling spot to avoid to damaging it.

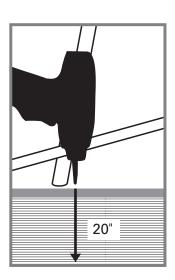



PERMANENT ANCHORS OF A TEMPORARY CAR SHELTER


Please read the instructions carefully and verify the pieces before starting the installation.

3. Installing the anchors:

After preparing the holes, insert the drive head into the anchor.

Make sure to screw it in completely ensuring it is flush with the top of the anchor.


Drive the anchor into the ground until it is level with the surface.

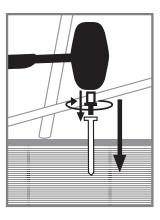

4. Setting the anchors:

Once the anchor is properly installed, remove the driving head and replace it with the push rod.


Use a mallet to drive the push rod causing the anchor into the ground until it is level with the surface.

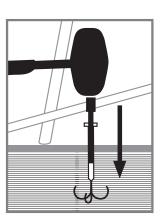

5. Attaching the eye bolt:

After the anchors are firmly set, install an eye bolt into each one by screwing it in securely.

Connect your car shelter to each eye bolt ensuring it's tightly fastened and stable.

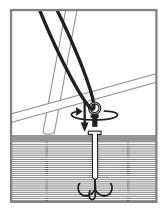

End of the season maintenance:

When the season ends and the shelter is no longer needed, it is advised to replace the eye bolts with the supplied screws to protect the integrity of the anchors and prepare for the next installation. Applying grease to the anchors will extend their lifespan.