

MINI SINGLE SLOPE WALKWAY

Please read the instructions carefully and verify the pieces before starting the installation.



MINI SINGLE SLOPE WALKWAY

BOLTS AND WING NUTS

Code part	Description	10'	15'	20'
B1	Bolt ¼" x 1 ¾"	11	14	17
B2	Bolt ¼" x 2 ½"	15	20	25
P	Wing nuts ¼"	26	34	42


HARDWARE

Code part	Description	10'	15'	20'
S HOOK	S hooks	6	6	6
ANNEAU	Shower hook	12	12	12
ELASTIQUE	Elastics	6	6	6
ROPE	Rope	1	1	1


PARTS

Code part	Description	10'	15'	20'
P1MM	Leg 1 hole	4	6	8
P2MM	Leg 2 holes	2	2	2
ACHMM	Arch corner top	3	4	5
ACBMM	Arch corner bottom	3	4	5
RAMM	Arch brace	3	4	5
EF5	Female brace	5	5	5
EM5	Male brace	5	10	15
DIA	Diagonal brace	5	6	7
T	Shelter cover	1	1	1


PARTS

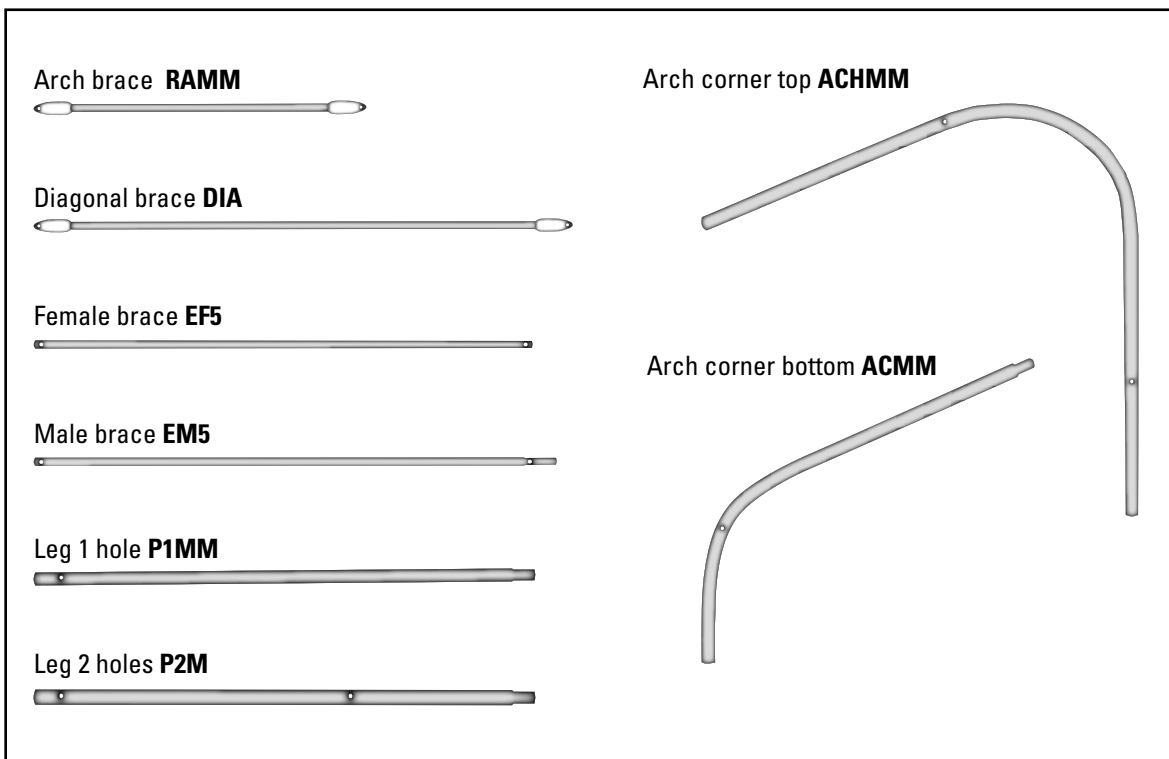

REQUIRED TOOLS (NOT INCLUDED)

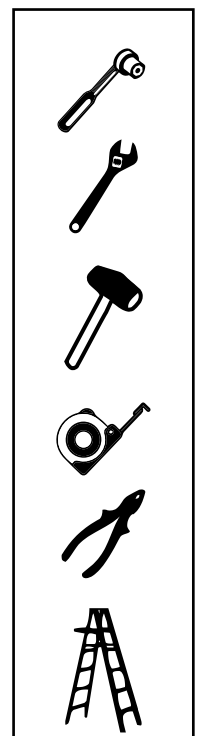


MINI SINGLE SLOPE WALKWAY SHELTER VIEWS

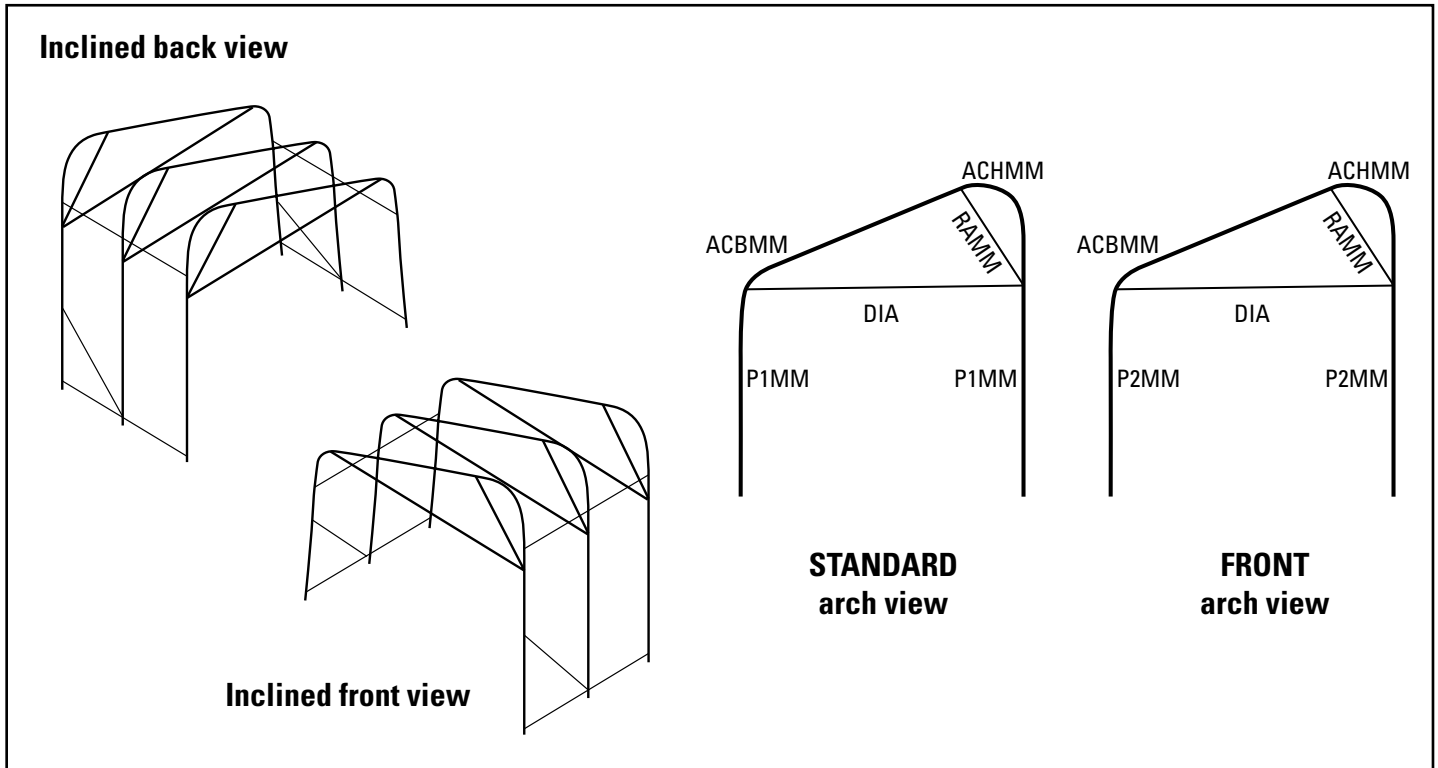


INSTALLATION

1. Assemble the arch corner top (**ACHMM**) and the arch corner bottom (**ACBMM**) to prepare the arch.

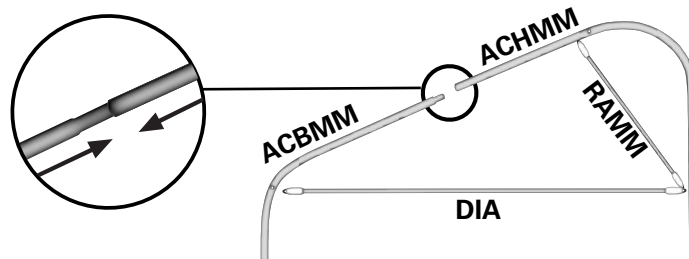


2. Add the diagonal brace (**DIA**) and an arch brace (**RAMM**) with the bolts $1 \frac{3}{4}$ " (**B1**) and the wing nuts (**P**).

3. Assemble all the arches before starting to build the shelter.

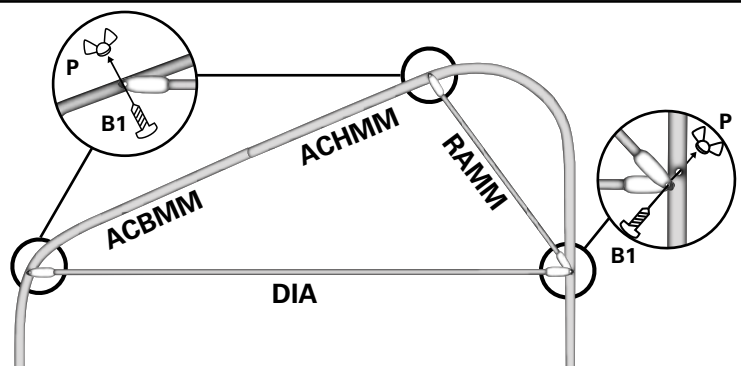

MINI SINGLE SLOPE WALKWAY

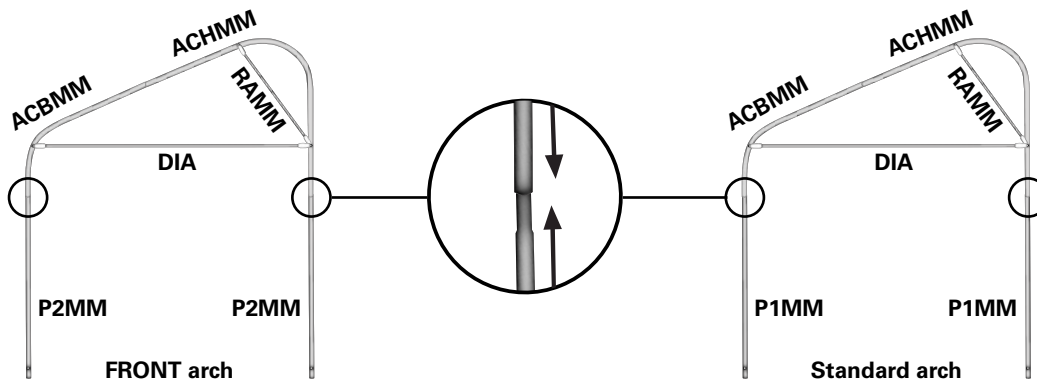


4. Add the 2 holes leg (**P2MM**) to both sides of the arch corners for the **FRONT arch**.

Add the 1 hole legs (**P1MM**) to both sides of the arch corners for the **STANDARD arch**.


5. For the **FRONT arch**, attach the arch brace (**DIA**) to the legs 2 holes (**P2MM**) with the bolt 1 3/4" (**B1**) and the wing nuts (**P**).

NB: The wing nuts (**P**), the female braces (**EF5**), the diagonal braces (**DIA**) and the male braces (**EM5**) must be installed **on the inner side** of the shelter. Doing so, prevents damage to the cover.

6. Assemble the male braces (**EM5**) with the female braces (**EF5**) and attach the **FRONT arch** with the female braces (**EF5**) with the bolts 2 1/2" (**B2**) and the wing nuts (**P**).

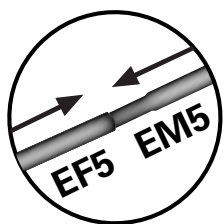



7. Finish assembling all the arches/legs with the male braces (**EM5**) by using the 2 1/2" bolts (**B2**) and the wing nuts (**P**).

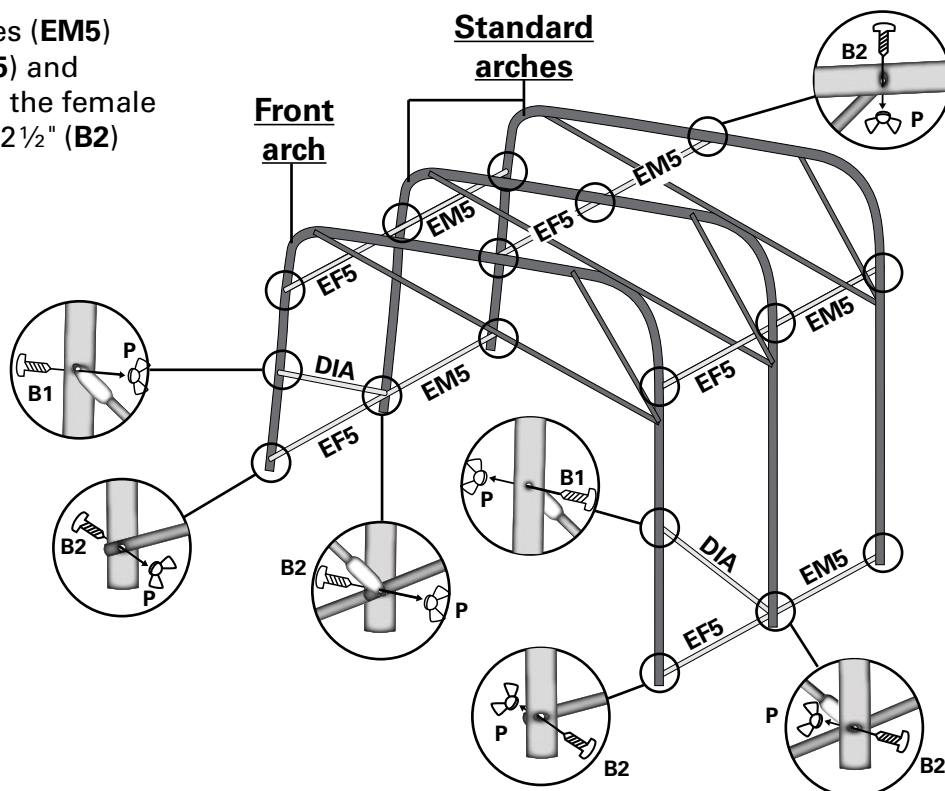

MINI SINGLE SLOPE WALKWAY



8. Ensure that the structure has been installed symmetrically by measuring the distances between points **A** and **D** as well as **B** and **C**. If the two measurements are equal, the structure is symmetrical.

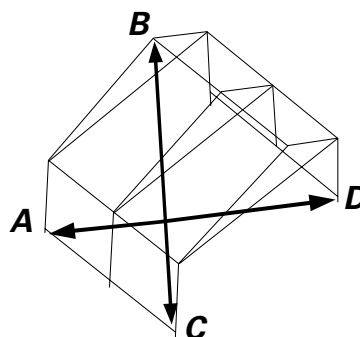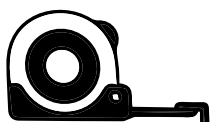



9. Install the shelter cover (**T**) on the structure. Tightly attach the tarp with the rope.

10. Hang the doors on the diagonal brace (**DIA**) using the shower hooks (**ANNEAU**).

11. Use the S hooks (**S HOOK**) and elastics (**ELASTIQUE**) to attach the doors: Insert the elastic (**ELASTIQUE**) in the grommet, on the opposite side insert the hook (**S HOOK**) and then pinch the hook (**S HOOK**) with a plier.

12. Once the installation is complete and secured, ensure that all wing nuts and the rope are tightened adequately.

The product is waterproof, except for its seams.

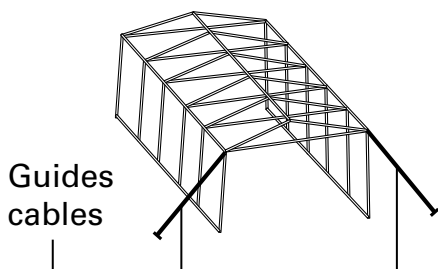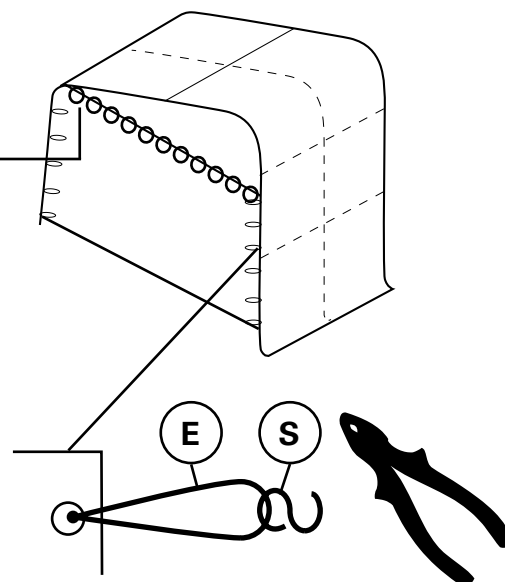

Requirement: Welded fabrics require anti wind bands (sold separately).

Please read the warnings indicated on your shelter tarp to prevent the shelter from failing down or flying away. **Guide cables** and **permanent anchors** (sold separately) are strongly suggested. The anchoring guide posted on our website will illustrate how to use your anchoring system of choice.

www.abrismondial.com/en/installation-plans.